MAINTENANCE TECHNICAL SUPPORT CENTER **HEADQUARTERS MAINTENANCE OPERATIONS**





Maintenance Management Order

SUBJECT: Operational & Preventive Maintenance

Guidelines for Low Cost Universal Sorters

(LCUS)

NO: MMO-045-15

DATE: April 21, 2015

FILE CODE: B3B **TO:** Maintenance Managers All LCUS Sites

pmur:mm14133aa

Operational Tourly Checklist, Item 7, substeps 3.h, 3.i, 3.j, and 3.k have added information for checking the D& R label and Scale check.

This Maintenance Management Order (MMO) provides Operational and Preventive Maintenance Guidelines for the Low Cost Universal Sorter System (LCUS). This bulletin applies to Acronym LCUS, Class Code BA.

The workhours represented in this MMO reflect the maximum workhours required to maintain the equipment. Given local conditions, management may modify task frequencies.

The minimum maintenance skill level required to perform each task is included in the Minimum Skill Level column of each checklist. This does not preclude higher level employees from performing any of this work.

WARNING

Various products requiring Material Safety Data Sheets (MSDS) may be utilized during the performance of the procedures in this bulletin. Ensure the current MSDS for each product used is on file and available to all employees. When reordering such a product, it is suggested that current MSDS be requested. Refer to MSDS for appropriate personal protective equipment.

WARNING

The use of compressed or blown air is prohibited. An alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp rag, lint-free cloth, or brush must be used in place of compressed or blown air.

Web Access: http://mtsc.usps.gov

WARNING

Steps contained in this bulletin may require the use of Personal Protective Equipment (PPE). Refer to the current Electrical Work Plan (EWP) MMO for appropriate PPE and barricade requirements.

Direct any questions or comments concerning this bulletin to the MTSC HelpDesk, online at MTSC>HELPDESK>Create/Update Tickets or call (800) 366-4123.

Robert E. Albert

Manager

Maintenance Technical Support Center

HQ Maintenance Operations

- Attachments 1. Summary of Workload Estimate
 - 2. Master Checklist 03-LCUS-BA-001-M LCUS PM
 - 3. Master Checklist 09-LCUS-BA-001-M LCUS Operational Maintenance

ATTACHMENT 1

SUMMARY OF WORKLOAD ESTIMATE FOR LOW COST UNIVERSAL SORTER

Attachment 1 i

THIS PAGE BLANK

ii Attachment 1

SUMMARY WORKLOAD ESTIMATE FOR LOW COST UNIVERSAL SORTER

Days	Routine Servicing (hrs/yr)	Repair* (hrs/yr)	Total Servicing & Repair Time (hrs/yr)	Non- Productive Time ** (hrs/yr)	Total Servicing Per Machine (hrs/yr)	OPERATION TOTAL SE	NAL MAINT RVICING	ENANCE +
						1 TOUR	2 TOURS	3 TOURS
5 Day	251.23	75.37	326.60	32.66	359.26	679.93	1,000.59	1,321.26
6 day	251.23	75.37	326.60	32.66	359.26	744.06	1,128.86	1,513.66
7 day	251.23	75.37	326.60	32.66	359.26	808.19	1,257.13	1,706.06

NOTES

- *Repair estimates based on 30% of servicing.
- **Based on 10% of total servicing and repair.

THIS PAGE BLANK

ATTACHMENT 2

LOW COST UNIVERSAL SORTER MASTER CHECKLIST

03-LCUS-BA-001-M

Time Total: See Attachment 1

U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maintenance Checklist	_	RK DE					MEN.				CLA CO	ASS DE	N	UMBE	ER	TYPE
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature Low Cost Universal Sorter	Equipment Model								Bulletin Filename mm14133				Occurr			

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time Req (min)	Min. Skill Lev	Run Hours	Threshold: Pieces Fed (000)	s Freq.
SAFETY STATEMENT		COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current		ALL			

			(min)		(000)	
SAFETY STATEMENT	1.	COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment. THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED. When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment by used. Beneat perfetty deficiencies to	1	ALL		
		cannot be used. Report safety deficiencies to your supervisor immediately upon detection. WARNING FOR EWP/PPE: Steps contained in this bulletin may require the use of Personal Protective Equipment (PPE). Refer to the current Electrical Work Plan (EWP) MMO for appropriate PPE and barricade requirements.				
		WARNING Be cautious when working around or on equipment when power has been applied. WARNING If electrical sources are energized, procedures must be performed following guidance provided in current EWP MMO.				
SCALES	2.	Verify Scale Calibration. In accordance with manufacturer's recommendation or local procedures, on each induction station, verify:	15	10		W

U.S. Postal Service								IDE	NTIFI	CATI	ON					
	WC	RK			Е	QUIF	MENT				CLA	ASS	N	UMBE	₽R	TYPE
Maintenance Checklist	CO	DE			- 1	ACRO	MYM				CO	DE				
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature	Equ	ipmer	nt Mo	del				Bı	ulletin	Filer	name		Occurr	ence		
Low Cost Universal Sorter									n	nm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	;
Component	No	(Comply with all current safety precautions)	Time	Skill	Run	Pieces	Freq.
			Req (min)	Lev	Hours	Fed (000)	
		Scale calibration					
		2. Proper operation of scale unit					
PHOTOSWITCH	3.	Sensor Alignment.	24	9			М
ACCUSIGHT PHOTOELECTRIC SENSORS		Inspect sensor alignment to ensure proper operation.					
32.1001.0		2. Inspect LED to ensure proper operation.					
		3. Inspect cabling and connectors for tightness.					
		Repeat for remaining sensors.					
LCUS COMPUTER	4.	Test Printer.	1	9			М
		Print a test page to test the performance of the printer and clean as needed.					
PUSHERS	5.	Check Pneumatic Pusher Diverters.	5	9			М
		On each pusher, verify air pressure is between 35 and 45 PSI.					
CONVEYOR	6.	Inspect Rollers.	2	9			М
		Verify all carrying rollers are turning.					
		When non-rotating carrying rollers are found, inspect the cam on the related pressure roller for proper seating on the support rail.					
LCUS COMPUTER	7.	Backup System Config Files.	10	10			М
		Make a copy of the "PLC Programs" directory.					
		Make a copy of the "Sorter Software" directory.					
		3. Store backup copies in accordance with local procedures.					
LCUS COMPUTER	8.	Backup System, TOC, & Historical Report Data.	10	10			М
		Double click the MSSQL Server icon in the bottom right of the desktop display.					
		From the SQL Server Services Manager, click the red "Stop" button to stop the SQL Server application.					
		Copy the "C:\Program Files\Microsoft SQL Server\MSSQL\Data" directory.					

U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maladana an Obaal Bat	WC	RK			Е	QUIF	MENT	-			CLA	ASS	N	UMBE	R	TYPE
Maintenance Checklist	CO	DE			- 1	ACR(MYNC				CO	DE				
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature	Equ	ipmer	nt Mo	del				В	ulletir	Filer	name		Occurr	ence		
Low Cost Universal Sorter									n	nm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.	D	Threshold	
Component	No	(Comply with all current safety precautions)	Time Req (min)	Skill Lev	Run Hours	Pieces Fed (000)	Freq.
		4 5 4 00 0		1			1
		 From the SQL Server Services Manager, click the green "Start/Continue" button to restart the SQL Server application. 					
		5. Store backup copies in accordance with local procedures.					
LCUS COMPUTER	9.	Check UPS.	2	9			Q
		Test performance of backup battery by pressing the test button (normally the "ON" button).					
CONVEYOR	10.	Inspect Guide Rails.	12	7			Q
		Verify all bracket fasteners are tight.					
LCUS COMPUTER	11.	Backup System Image HDD.	120	10			Q
		 Using the instructions applicable to the installed backup software (i.e. Symantec Ghost 2003); create an image of the system hard drive. 					
		Store system image disk for disaster recovery in accordance with local policy.					
LCUS COMPUTER	12.	Test Spare Computer.	120	10			Q
		Perform an operational test the spare LCUS computer in accordance with local procedures.					
POWER SUPPLY	13.	Check Input and Output Levels.	240	10			S
		 Verify the output voltage, (depending on installed unit). 					
		2. Verify the input voltage: 120VAC, 20A.					
		3. Review the manufacturer's information printed on the power supply to determine the specifications of the installed units.					
		a. 24VDC (24-28VDC), 12A (8 Motor PS) or					
		b. 24VDC (24-28VDC), 24A (16 Motor PS) OR					
		c. 48VDC (48-52VDC)					
DEVICENET	14.	Inspect and Test LEDs.	110	10			Α
AUXILIARY MODULE		 Using the information in Section 7.2.3.2 of the LCUS Electrical and PLC Maintenance Manual, test the module LEDs for proper operation. 					
		2. Repeat test on remaining modules.					

U.S. Postal Service								IDENT	IFICAT	ION					
	WC	RK			Е	QUIF	MENT			CLA	ASS	N	UMBE	R	TYPE
Maintenance Checklist	CO	DE				ACRO	MYM			CO	DE				
	0	3	L	С	U	S				В	Α	0	0	1	М
Equipment Nomenclature	Equi	pmer	nt Mo	del				Bulle	tin File	name		Occur	ence		
Low Cost Universal Sorter									mm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	
Component	No	(Comply with all current safety precautions)	Time Req	Skill Lev	Run Hours	Pieces Fed	Freq.
			(min)	201	riours	(000)	
COMPACTBLOCK	15.	Inspect LEDs.	10	10			А
I/O		1. Using the information in Section 7.3.3.3 of					
		the LCUS Electrical and PLC Maintenance					
		Manual, ensure the module LEDs are					
		functioning and do not indicate any faults.					
		2. Repeat inspection on remaining modules.					
I/O CARD	16.	Inspect LEDs.	28	10			Α
		1. Using the information in Section 7.4.3.3 of					
		the LCUS Electrical and PLC Maintenance					
		Manual, ensure the I/O Card LEDs are					
		functioning and do not indicate any faults.					
		Repeat inspection on remaining I/O Cards.					
160 SERIES VFD	17.	Inspect LEDs.	118	10			Α
AND ASSOCIATED DEVICENET		1. Using the information in Section 7.5.6 of the					
ADAPTER		LCUS Electrical and PLC Maintenance					
MODULE		Manual, ensure the VFD LEDs are					
		functioning and do not indicate any faults.					
		Repeat inspection on remaining VFDs.					
LOCKOUT	18.	Perform System Lockout.	30	7			W, M,
		Power down the machine and lock out power and					Q, S, K
		compressed air as prescribed by the current local					I N
		lockout instructions.					
CONVEYOR	19.	Spot Check Idler Rollers.	18	7			W
		 Spot-check roller faces of random 10% of return rollers. 					
		Look for excessive wear and build-up of foreign material on roller faces.					
0011/5/00	00		04				107
CONVEYOR	20.	Clean, & Inspect Photocell / Proximity Switch Units.	21	9			W
		Remove accumulated dust and foreign					
		material from housings, lenses and reflectors					
		by wiping or brushing.					
		2. Wrench-test all mounting bolts for tightness.					
CONVEYOR	21.	Inspect Power Rollers.	30	9			W
		Verify shaft bracket for tightness.					
		2. The shaft should not rotate or vibrate in the					
		bracket or frame.					
				l			

1011010-0 1 3-13								IVIC	אוו ונ	CHa	HOC	100		ai Ou	PPO	IL O	CHICH
U.S. Postal	Service								IDE	NTIF	ICAT	ION					
Maintenance	Checklist		ORK ODE					MEN NYMC					ASS DDE	N	UMBE	ΞR	TYPE
		0	3	L	О	U	S					В	Α	0	0	1	М
	Equipment Nomenclature Low Cost Universal Sorter			nt Mo	del				В			name 4133		Occurr	ence		
Dort on Library			T 1 0 1 1 1 1 1					1	-	N.C.		TI		-			
Part or Item Component No (Task Statement and Instruction (Comply with all current safety precautions)									Est. Time	Min. Skill	Run	_	eshold eces	s Freq.

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	3
Component	No	(Comply with all current safety precautions)	Time Req (min)	Skill Lev	Run Hours	Pieces Fed (000)	Freq.
		3. Verify all attachment nuts & bolts are tight.					
PHOTOSWITCH	22.	Clean and Inspect Sensors.	21	9			W
ACCUSIGHT PHOTOELECTRIC SENSORS		Using a dry lint-free cloth, remove all dust and debris.					
		2. Visually inspect for any defects.					
SYSTEM OPTICS	23.	Check and clean system optics on all Vitronics Cameras.	30	7			М
		CAUTION The glass used in this system is fragile enough to break if pressure is applied.					
		Wipe very gently.					
		CAUTION					
		Do not scratch the glass. Wiping the glass with a dirty cloth can result in very small scratches.					
		NOTE					
		Do not wet microfiber cloth. It should not feel wet; otherwise it is too moist and could leave wet spots on the glass. Only a misting of the cloth is required. Optionally, use a locally approved streak-free glass cleaner.					
		Check ViCAMssi2-PSOC camera unit glass.					
		If glass is noticeably covered with dust, wipe the glass with a clean microfiber cloth.					
		 Wipe off any smudges. Use spray bottle with glass cleaner to mist microfiber cloth for wiping away stubborn smudges 					
		2. Check LED light grid receiver glass.					
		 If glass is noticeably covered with dust, wipe the glass with a clean microfiber cloth. 					
		b. Wipe off any smudges. Use spray bottle to mist microfiber cloth for wiping away					

U.S. Postal Service								IDE	NTIFI	CATI	ON					
	WC	RK			Е	QUIF	MENT				CLA	ASS	N	UMBE	₽R	TYPE
Maintenance Checklist	CO	DE			- 1	ACRO	MYM				CO	DE				
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature	Equ	Equipment Model								Filer	name		Occurr	ence		
Low Cost Universal Sorter									n	nm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	
Component	No	(Comply with all current safety precautions)	Time Req (min)	Skill Lev	Run Hours	Pieces Fed (000)	Freq.
		stubborn smudges					
		Check LED light grid transmitter glass.					
		 a. If glass is noticeably covered with dust, wipe the glass with a clean microfiber cloth. 					
		 Wipe off any smudges. Use spray bottle with glass cleaner to mist microfiber cloth for wiping away stubborn smudges 					
		4. If applicable, check mirror glass.					
		 a. If glass is noticeably covered with dust, wipe the glass with a clean microfiber cloth. 					
		 Wipe off any smudges. Use spray bottle with glass cleaner to mist microfiber cloth for wiping away stubborn smudges 					
LCUS COMPUTER	24.	Clean Keyboard and Mouse.	3	7			М
		Wipe clean and vacuum debris. Ensure proper operation.					
CONVEYOR	25.	Check Belting (PVC Belt).	14	9			М
		Look and feel for damage to the belt cover and carcass (inner layer).					
		Examine top and bottom covers for excessive wear, scuffs, gouging, stripping, cracking, swells, and ply separation.					
		Look for excessive wear or tears along belt edges.					
		Look for accumulation of dirt or foreign materials on top and bottom surfaces.					
CONVEYOR	26.	Check Belt Fasteners.	3	9			М
		Examine all fasteners used in splicing or repairing the belt.					
		Look for wear or damage to fasteners.					
		Ascertain that they are secure in belt.					
		Examine belt for transverse breaks or ply separations.					

U.S. Postal Service								IDE	NTIF	ICATI	ION					
Mainton on a Obsobilat	WC						MEN					ASS	N	UMBI	ΞR	TYPE
Maintenance Checklist	CO	DE				ACR(MYNC				CO	DE				
	0	3	L	С	U	S					В	Α	0	0	1	M
Equipment Nomenclature	Equi	ipmer	nt Mo	del				В	ulletir	Filer	name		Occur	rence		
Low Cost Universal Sorter									r	nm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	
Component	No	(Comply with all current safety precautions)	Time Req (min)	Skill Lev	Run Hours	Pieces Fed (000)	Freq.
CONVEYOR	27.	Clean & Inspect Belting.	30	7			М
		Brush belt or wash with a solution of mild detergent and water to remove accumulated dust and foreign material from pulley contact side of accessible belt areas.					
		Do not permit moisture to enter roller or pulley bearings.					
CONVEYOR	28.	Clean & Inspect Air Operated Devices.	9	9			М
		Remove accumulated dust and foreign material from components by wiping or brushing.					
		2. Wrench-test all mounting bolts for tightness.					
		Repeat steps 1 and 2 for each air operated device.					
CONVEYOR	29.	Inspect Roller O-Rings.	60	7			М
		Check for cracked, broken, or elongation occurring in the bands between rollers.					
PUSHERS	30.	Inspect Pneumatic Pusher Diverters.	130	9			М
		Verify photo sensor flag is vertical.					
		2. Verify locking collar is tightened.					
		Verify Photo sensor mount is securely fastened.					
		 Verify air cylinder end cushions are adjusted properly to eliminate slamming at end of stroke when actuated. 					
		Inspect all components for wear and proper alignment.					
		OR					
		Inspect Electric Pusher Diverters.					
		Verify Home Proximity sensor to flag gap, should be 1/4" minimum.					
		Verify side-to-side gap of approximately 1/16" gap on both sides.					
		Inspect all components for wear and proper alignment.					
LCUS COMPUTER	31.	Clean Monitor.	2	7			Q
		Clean Screen with an approved monitor screen					

U.S. Postal Service								IDE	NTIFI	CATI	ON					
	WC	RK			Е	QUIF	MENT				CLA	ASS	N	UMBE	₽R	TYPE
Maintenance Checklist	CO	DE			- 1	ACRO	MYM				CO	DE				
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature	Equ	Equipment Model								Filer	name		Occurr	ence		
Low Cost Universal Sorter									n	nm1	4133					

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	
Component	No	(Comply with all current safety precautions)	Time Req	Skill Lev	Run Hours	Pieces Fed	Freq.
			(min)	Lev	Hours	(000)	
	•		•	1	1		
		cleaner and a lint free non-abrasive cloth.					
LCUS COMPUTER	32.	Clean CPU.	20	10			Q
		 Open case, and remove dust and debris using HEPA vacuum and soft bristle brush as needed. 					
		2. Ensure all cards and connectors are secure.					
CONVEYOR	33.	Inspect Conveyor.	35	9			Q
		Examine conveyor for worn or loose parts.					
		Check for accumulated dust or other foreign materials.					
		Look and feel for loose or damaged conduit and wiring.					
CONVEYOR	34.	Check Motorized Pulleys.	22	9			Q
		Make certain that shafts at connection end and drive end are free from dirt accumulation.					
		Examine flanges at both ends of pulley for oil leakage.					
		 Rotate pulley until embossed arrow on end flange of electrical terminal box is in true vertical position then remove oil filler plug and check oil level. 					
PULLEYS	35.	Check Head, Tail, Take-Up & Snub.	14	9			Q
		Examine pulley face for general wear and grooving caused by conveyor belt.					
		Look for build-up of foreign material on pulley face.					
		Examine pulley bearings for wear, dirt, or corrosion.					
		If possible, feel pulley shafts for looseness through bearings.					
		5. Check bearing stops for proper position.					
SCREW TAKE-UP	36.	Inspect Assembly.	4	9			Q
		Feel to ascertain that take-up frame is securely mounted.					
		Make certain that adequate take-up travel is provided to allow for adjustment as needed					

U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maintenance Checklist	WO CO	RK DE					MENT MYMC					ASS DDE	N	UMBI	ΞR	TYPE
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature Low Cost Universal Sorter	Equipment Model								ulletin n		ame 4133		Occurr	ence		

ı	Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	s
ı	Component	No	(Comply with all current safety precautions)	Time	Skill	Run	Pieces	Freq.
				Req	Lev	Hours	Fed	
				(min)			(000)	1

			(min)		(000)	
		before next inspection.				
CONVEYOR	37.	Check Structural Parts.	30	7		Q
CONVETOR	37.	Check conveyor for damage caused by mail jams, vibration, improper loading, or abnormal attrition. These could result in loosened connecting bolts, side panels misaligned, loose hanger rods, belt wipers, and supports.	30	,		, a
		Examine structure for cracked or broken welds.				
		3. Examine all floor mounted or low clearance conveyor support structures, ladders, walkways, handrails, guards, bracing or any other structural members that might be exposed to or subject to being struck by any Powered Industrial Vehicles (Forklifts, Pallet Jacks, Tow Motors, etc.).				
		Look for damage such as fractured or deformed parts, broken bolts, loose anchor bolts, cracked welds, and loose connections.				
CONVEYORS	38.	Clean and Inspect.	30	7		Q
		Remove dust and accumulated foreign material from conveyor parts by wiping and brushing.				
		2. Wrench-test all mounting bolts for tightness.				
		Pillow/Flange block bearings are sealed for life and require no lubrication.				
CONVEYOR	39.	Clean and Inspect Motorized Pulley.	66	9		Q
		Remove accumulated dust and foreign material from face of lagged pulley, by brushing, wiping, or washing as appropriate.				
		2. Inspect for wear or damage to pulley lagging.				
CONVEYOR	40.	Clean and Inspect, Head, Tail, Take-Up & Snub Pulleys.	34	7		Q
		Brush, wipe, or scrape accumulated dust and foreign material from pulley face.				
		2. Look for wear or damage to pulley face.				
CONVEYOR	41.	Clean and Inspect Screw Take-Up.	8	9		Q

U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maintenance Checklist	W C	RK DE					MENT	'			CLA CO		N	JMBE	R	TYPE
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature Low Cost Universal Sorter	Equipment Model									n Filer	name 4133	C	Occurr	ence		

	1	7 1011 1111	T = .				
Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill	Run	Thresholds Pieces	Freq.
Component	110	(Somply with an earliest salety presautions)	Req	Lev	Hours	Fed	r req.
			(min)			(000)	
		Brush and wipe accumulated dust and					
		foreign material from take-up adjusting					
		screws, carriage frame, and other take-up					
		assembly parts.					
		Wrench-test adjusting nuts and frame					
		mounting bolts for tightness. Inspect belt for					
		evidence of improper tension.					
		3. Lubricate take-up screw with SAE 30-W oil.					
		·					
CONVEYOR	42.	Inspect Taper-Lock Pulley Hubs.	6	9			Q
		Wrench-test hub mounting screws for					
		tightness.					
		Look for damage to hubs and shafts, and for					
		broken or missing screws.					
0011/5/05	40	<u>-</u>	40	_			
CONVEYOR	43.	Clean & Inspect Bearing Blocks.	18	9			Q
		1. Wrench-test bearing block mounting bolts for					
		tightness. Tighten as required.					
		2. Wrench-test all setscrews in bearing collars					
		for tightness on pulley shaft. Tighten as					
		required.					
		3. Wipe off exterior of sealed bearings.					
CONVEYOR	44.	Clean & Inspect Gear Reducers.	5	9			Q
		Remove accumulated dust and foreign					
		material from housing.					
		2. Inspect for oil leakage.					
		Wrench-test all mounting bolts for tightness.					
OONIVEYOR	4.5		_	_			
CONVEYOR	45.	Clean & Inspect V-Belt Drive.	5	9			Q
		Remove guard.					
		Remove accumulated dust and foreign					
		material from belt & sheaves and inspect for					
		wear.					
		3. Check belt for proper tension.					
		4. Wrench-test sheave setscrews and feel keys					
		and sheaves for tightness on shaft.					
	<u> </u>				<u> </u>		

U.S. Postal Service								IDE	NTIF	ICAT	ION					
Maintenance Checklist	WC	RK DE					MEN'					ASS DE	N	UMB	ER	TYPE
	0	3	L	С	U	S					В	Α	0	0	1	М
Equipment Nomenclature Low Cost Universal Sorter	Equipment Model										name 4133		Occur	rence		

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill	Run	Thresholds Pieces	Freq.
			Req (min)	Lev	Hours	Fed (000)	
CONVEYOR	46.	Lubricate Chain Roller.	15	7			Q
		Brush any SAE 30 motor oil along the length of the chain. (Alternate Method: remove chain and soak in SAE 30 weight oil for 1 hour, reinstall.)					
POWER SUPPLY	47.	Clean Power Supply Enclosures (All).	28	7			S
		Using a dry lint-free cloth and vacuum, remove any dirt or debris from the enclosure.					
		Repeat task on all remaining Power Supply Enclosures.					
POWER SUPPLY	48.	Tighten Power Supply Connections (All).	35	9			S
		Check for loose wires or fittings, tighten as					
		necessary.					
		2. Repeat task on all remaining power supplies.					
DEVICENET	49.	Clean and Inspect Modules.	38	10			S
AUXILIARY MODULE		Using a dry lint-free cloth and vacuum, remove any dirt or debris from the module.					
		Inspect wires and connectors for defects and tightness.					
COMPACTBLOCK	50.	Clean and Inspect Modules.	65	10			S
I/O		Using a dry lint-free cloth and vacuum, remove any dirt or debris from the module.					
		Inspect wires and connectors for defects and tightness.					
I/O CARD	51.	Clean and Inspect Cards.	45	10			S
		Using a dry lint-free cloth and vacuum, remove any dirt or debris from the I/O Cards.					
		Inspect wires and connectors for defects and tightness.					
160 SERIES VFD	52.	Clean and Inspect Module.	25	10			S
AND ASSOCIATED DEVICENET ADAPTER MODULE		Using a dry lint-free cloth and vacuum, remove any dirt or debris from the VFD and associated Devicenet Adapter Module.					
		Inspect wires and connectors for defects and tightness.					

U.S. Postal Service								IDE	NTIF	ICAT	ION						
Matatana a Objectit	WC	RK									CLA	ASS	Ν	UMBI	TYPE		
Maintenance Checklist	CODE				E ACRONYM												
	0	3	L	С	U	S					В	Α	0	0	1	M	
Equipment Nomenclature	Equipment Model						Bulletin File					ename (Occurrence		
Low Cost Universal Sorter									r	nm1	4133						

Part or	Item	Task Statement and Instruction	Est.	Min.		Thresholds	
Component	No	(Comply with all current safety precautions)	Time Req (min)	Skill Lev	Run Hours	Pieces Fed (000)	Freq.
CONVEYOR	53.	Change Motorized Pulley Oil.	40	7			K
		With disconnect locked out,					
		Disconnect the motor leads from the terminal board,					
		Loosen the setscrews and remove the junction box.					
		Relieve screw take-up to loosen belt and remove pulley from conveyor mountings.					
		 Remove drain plug and seal washer and remove oil with suction pump. 					
		With pulley in the horizontal level position, rotate the pulley until the embossed arrow on the drive end is pointing up.					
		 Refill with EP100 (Mobil SHC-634 or equivalent) synthetic oil to level of the oil fill hole. 					
		Re-install fill-hole plug with a new copper seal washer. Re-install pulley on conveyor.					
RESTORE	54.	Restore Power to Equipment.	7	7			W, M
		Restore equipment to service as prescribed by the current local procedures.					Q, S, K
CLEAN UP	55.	Clean Up Ensure all tools, lubricants; rags, etc. are removed from the work area. Report all deficiencies to supervisor.	2	7			W, M, Q, S, K

ATTACHMENT 3

LOW COST UNIVERSAL SORTER MASTER CHECKLIST

09-LCUS-BA-001-M

Operational Maintenance

Time Total: 74 minutes

U.S. Postal S	Service		IDENTIFICATION										enter		
Maintenance (Check	list	WORK CODE		P	QUIPN ACRON		-		С	LASS		JMBER	TYPE	
			0 9	L C	U	S				В	Α		0 1	M	
Equipment Nomenclature Low Cost Unive		orter	Equipme	nt Model				Bull		lename 114133		Occurrence Tourly			
Part or Component	Item No	(0		Statement th all currer				ns)		Est. Time Req (min)	Min. Skill Lev	Run Hours	Pieces Fed (000)	ls Freq.	
SAFETY STATEMENT		COMPLY Disconnerequired local loshutdown equipmen Check fo If any usupervise further ac THE USE IS PROHI When cl cleaning vacuum in place free clottl equipmen cannot be your supe WARNING Steps co the use (PPE). F Plan (EW barricade	ect pow by this ockout n and I nt and r suspic inusual or prio ction on E OF CO (BITED. eaning method cleaner of comp h or bront of som e used. ervisor e used. ervisor of Per Refer to VP) MM	er and instruct proced ockout inspectious du substar to p the equipment or a dapressed ush may when ot Report immedia EWP/PPI in this sonal Forthe culo for a dapressed when ot Report immedia EWP/PPI in this sonal Forthe culo for a dapressed when ot Report immedia EWP/PPI in this sonal Forthe culo for a dapressed when ot the culo for a dapressed when other a dapressed in the culo for a dapressed when the culo for a dapresse	application. durest this ct coust o nce roce lipme as mp ror by be telly extended the coust of t	y loo Refiser to macdust runtiser of edingent. OR I, and of leagent of used to lean of ty define of the lective of the control of the contro	ekouter to o I hine cor usual ounce g W BLO alt EPA ust in air. d on ing r eficie may ctric	ts w cur proprop Ondition I del I del I mo ith WN erna filte A notie cetto req uipn al V	hen rent erly pen ons. oris. oris. otify any AIR tive ered sed lint-tical so to on. uire nent fork		All				
LCUS COMPUTER		Check CF Visually cl cooling fa	heck the n is ope	rating.	omp	uter t	o ens	sure	the	1	9				
CONVEYORS		transr 2. Listen	equipme t any exc nitted by	nt runnir cessive so conveyoned	shock or.	or vi	ibrati	on	to	8	9				
CONVEYORS	4.		equipme	l, Take-U nt opera normal r	ting,	listen		-		2	9				

2. Feel bearing housings for excessive

3. Examine pulleys for eccentricity or other indications of a bent shaft.

vibrations.

maintonanoo roominoaroa	opon c	Olit	<u> </u>												*: \	<u> </u>	10 10
U.S. Postal Service								IDE	NTIF	CAT	ION						
Maintananaa Chaaklist	1	WORK EQUIPMENT							CLASS			NUMBER			TYPE		
Maintenance Checklist	CC	CODE ACRONYM								CC	DDE						
	0	9	L	С	U	S					В	Α	C		0	1	М
Equipment Nomenclature	Equ	Equipment Model Bulletin F								File	name		Occı	ırrer	псе		
Low Cost Universal Sorter		mm14133											То	urly	'		
Part or Item Task Statement and Instruction											Fet	Min		7	hre	sholo	le

Low Cost Univ	ersai S	orter		mm	14133		Tourly					
Part or Component	Item No	(Task Statement and Instruction Comply with all current safety precaution	s)	Est. Time Req (min)	Min. Skill Lev	Run Hours	Threshold: Pieces Fed (000)	Freq.			
		1		T		_		(000)	1			
CONVEYORS	5.	1. With	ller Rollers. equipment operating, listen for al from load and return rollers.	bnormal	11	9						
			k for sluggish or frozen rollers.									
		3. Look	for eccentricity or other evidence shaft.	e of a								
CONVEYORS	6.	Check B	elting (PVC Belt)		3	9						
		1. With (unde	equipment operating, observe be er load if possible), to determine i on is properly adjusted.									
			and listen for evidence of belt sli otorized drive pulley.	ppage								
		3. Look rolls.	for excessive belt sag between in	dler								
			erve tracking of belt over tail, head up pulleys.	d, and								
			for belt run-out along carrying arn runs of conveyor	nd								
SYSTEM	7.	Check S	ystem Operation.		15	9						
		1. With	system operating and sort plan lo ne tray or scan a tray label	paded,								
		2. Verify	y that the camera reads the barco	ode								
		3. Chec	k ULX Transmission in MPEWate	ch								
			On any ACE computer log into MPEWatch.									
		b. S	Select MPEwatch Site List.									
		c. S	Select your facility from the list of	sites.								
			Select mhe monitor from the meno options at the top of the screen.	u								
			Find the LCUS in the chart at the of the page.	bottom								
		f. E	Ensure it has "OK" under ULX De	tails.								
		r	Review all other information on the eport and notify supervisor of any problems.									

U.S. Postal Service

Maintenance Technical Support Center IDENTIFICATION

Maintenance	Check	WORK EQUIPMENT CODE ACRONYM	_	LASS ODE	NUMBER	TYPE
		0 9 L C U S	В	Α	0 0 1	М
Equipment Nomenclature Low Cost Unive		Equipment Model Bulletin Fi orter mm	lename 114133		Occurrence Tourly	
Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time Req (min)	Min. Skill Lev	Run Pieces Hours Fed (000)	s Freq.
		NOTE				
		If discrepancies are found place the equipment out of service.				
		h. Print a DNR test label.				
		 Check the label quality to ensure it does not have any defects as described in MMO-012-09. 				
		NOTE				
		If discrepancies are found place the equipment out of service.				
		j. Place a calibrated known weight on the scale.				
		 k. Ensure the scale is reading the correct weight ± .05 pounds of calibrated weight. 				
PUSHERS	8.	Observe Operation of Pushers (Pneumatic or Electric).	15	9		
		 Ensure pushers are the parcels (or other products) on center. 				
		Verify the pusher is not making "Hard Contact" with the parcels due to them not being close to the pusher on the belt.				
		3. Ensure the pusher fully extends and retracts each cycle.				
		 Listen/watch for excessive noise or vibration during pusher cycle. 				
INDUCTION	9.	Observe Operation of Induction Lanes (All)	11	9		
LANES		1. Ensure all belts are functioning properly.				
		Observe Operator or run test pieces to ensure proper operation of the scanner and keypad.				
		Ensure scanned or keyed parcels are being properly inducted onto the sorter.				
		4. Talk with operators to determine if they have been experiencing any machine problems.				

U.S. Postal	Service						FICATI								
Maintenance	Check	list	WORK CODE			IPMENT RONYM				LASS ODE	NU	IMBER	TYPE		
			0 9	L C	US				В	A	0	0 1	М		
Equipment Nomenclature			Equipmen	nt Model				in Filer			Occurrence				
Low Cost Unive	ersal Sc	orter						mm1	4133			Tourly	/		
Part or	Item			Statement		Est. Time	Min. Skill		Threshol						
Component	No	(0	(Comply with all current safety precautions)								Run Hours	Pieces Fed	Freq.		
												(000)			
SYSTEM	10.	Check Re	ejects.						5	9					
		Non-Rec Configur		g Machi	nes (S	raight	or "L"	•							
		1. Obse end b	rve the F in.	Full Insp	ect the	conter	its of t	the							
		lane a piece	tiple pied are found s failed to uipment p	l in the e o sort du	nd bin, ie to th	determ	ine if t	the							
		Recircula	ating Ma	chines (Oval C	onfigu	ration)							
		1. Obse ensur	rve the l				cators	to							
			rve the no pieces												
CLEAN UP	11.	Clean up							2	7					
				NO	DTE										
		correc worko proble genera	oblems ted on the rder and meanned ate a Coork can be	nis tour good correct be contractive or schedu	generat the pro rrected worko uled.	e a Re blem. on this	active If the s tour that								

removed from the work area. deficiencies to supervisor.

Report all