MAINTENANCE TECHNICAL SUPPORT CENTER / MAINTENANCE POLICIES & PROGRAMS ENGINEERING / UNITED STATES POSTAL SERVICE

Maintenance Management Order UNITED STATES POSTAL SERVICETM



SUBJECT: Preventive Maintenance (PM) Servicing Guidelines for

Lockheed Martin (LM) Tray Management System (TMS)
Tray Transport Power Roller (TT) Bi-Directional Conveyor

TO: All Lockheed Martin TMS Sites FILE CODE:

rorn:mm09030ad

July 30, 2010

MMO-077-10

TM05

DATE:

NO:

This Maintenance Management Order (MMO) provides PM Servicing Guidelines for LM TMS TT Bi-Directional Conveyor. Acronym used is TT. Class code used is BA.

The workhours represented in this MMO reflect the maximum workhours required to maintain the equipment. Given local conditions, management may modify task frequencies.

The minimum maintenance skill level required to perform each task is included in the Minimum Skill Level column of each checklist. This does not preclude higher level employees from performing any of this work.

Maintenance Managers are to use these preventive maintenance guidelines when preparing the route sheets for local maintenance personnel. It is the responsibility of each Maintenance Manager to ensure all WARNINGS, CAUTIONS, and NOTES are included with each applicable task as part of the preparation of any local route sheets.

WARNING

Various products requiring Material Safety Data Sheets (MSDS) may be utilized during the performance of the procedures in this bulletin. Ensure the current MSDS for each product used is on file and available to all employees. When reordering such a product, it is suggested that current MSDS be requested. Refer to MSDS for appropriate personal protective equipment.

Web Access: https://www1.mtsc.usps.gov

WARNING

The use of compressed or blown air is prohibited. An alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp rag, lint-free cloth, or brush must be used in place of compressed or blown air.

For questions or comments concerning this bulletin contact the MTSC HelpDesk, either online at MTSC>HELPDESK>Create/Update Tickets or call (800) 366-4123.

Robert E. Albert

Manager

Maintenance Technical Support Center Maintenance Policies and Programs

- 1. Summary of Workload Estimate
- 2. LM TMS TT Bi-Directional Conveyor: Master Checklist:03-TT-BA-201-M: Monthly
- 3. LM TMS TT Bi-Directional Conveyor: Master Checklist:03-TT-BA-202-M: Semi-Annual

ATTACHMENT 1

SUMMARY

WORKLOAD ESTIMATE

FOR

LM TMS TT BI-DIRECTIONAL CONVEYOR

SUMMARY WORKLOAD ESTIMATE

5-8 Zone Elevated Module

Days	Routine	Repair*	Total	Nonproductive	Total
	Servicing	(hrs/yr)	Servicing &	Time **	Servicing
	(hrs/yr)		Repair	(hrs/yr)	Per
			Time		Machine
			(hrs/yr)		(hrs/yr)
5 Day	2.33	0.70	3.03	0.30	3.34
6 day	2.33	0.70	3.03	0.30	3.34
7 day	2.33	0.70	3.03	0.30	3.34

Floor Level and 1-4 Zone Elevated Module

Days	Routine Servicing (hrs/yr)	Repair* (hrs/yr)	Total Servicing & Repair Time	Nonproductive Time ** (hrs/yr)	Total Servicing Per Machine
			(hrs/yr)		(hrs/yr)
5 Day	2.30	0.69	2.99	0.30	3.29
6 day	2.30	0.69	2.99	0.30	3.29
7 day	2.30	0.69	2.99	0.30	3.29

NOTES:

*Repair estimates based on 30% of servicing.

**Based on 10% of total servicing and repair.

ATTACHMENT 2 LM TMS TT BI-DIRECTIONAL CONVEYOR MASTER CHECKLIST

03-TT-BA-201-M MONTHLY

Time Total: 10 Minutes per module

ΑII

9

3

U.S. Postal Service	IDENTIFICATION																
Maintan ana a Obaaldiat		RK	EQUIPMENT							SS	N	JMBE	ΞR	TYPE			
Maintenance Checklist	CC	CODE ACRONY							CODE								
	0	3	Т	Т							В	Α	2	0	1	М	
Equipment Nomenclature	Equ	Equipment Model					В	Bulletin	(Occurr							
LM TMS TT		Bi-D	irect	iona	I Co	nvey	or		MM09030AD					Monthly			

	Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	S
(Component	No	(Comply with all current safety precautions)	Time	Skill			
				Req	Lev	Run	Pieces	Freq.
				(min)		Hours	Fed	
							(000)	

SAFETY STATEMENT

1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp cloth, lint-free cloth or brush, must be used in place of compressed or blown air. Report safety deficiencies to your supervisor immediately upon detection.

WARNING

Be cautious when working around or on equipment when power has been applied.

IDLER ROLLER

- 2. Check idler rollers for debris.
 - 1. On the cell control PC, enter login ID and password.
 - 2. On the TMS Main Menu, select Cell Controller.
 - On the CELL STATUS screen, select the Cell Offline button.
 - 4. Select the Conveyor button.
 - On the CONVEYOR MANAGEMENT screen, select the Device Id(s) (and select the zone(s) if applicable) for the conveyor being checked.
 - 6. Select Force Output button. The conveyor (zone(s)) selected should now be operating.
 - 7. Check drive and idler rollers for attached debris.

9

U.S. Postal Service								IDE	ENTIFI	CAT	ION							
Made to a constant of the set of the	WC	RK		EQUIPMENT						CLASS					NUMBER			
Maintenance Checklist	CODE ACRON						MYM	CODE										
	0	3	Т	Т							В	Α	2	0	1	М		
Equipment Nomenclature	Equ	Equipment Model						Е	Bulletin Filename					Occurrence				
LM TMS TT		Bi-Directional Conveyor						MM09030AD					Monthly					

Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	S
Component	No	(Comply with all current safety precautions)	Time	Skill			
			Req	Lev	Run	Pieces	Freq.
			(min)		Hours	Fed	•
						(000)	

- 8. Power down and lock out power as prescribed by the current local lockout/restore procedures.
- 9. Remove any dirt/debris found. If required, clean the roller with soap and water.

WARNING

Be cautious when working around or on equipment when power has been applied.

 Restore equipment to service as prescribed by the current local lockout/restore procedures.

DRIVER ROLLERS

- 3. Check drive rollers and O-rings.
 - On the cell control PC, enter login ID and password.
 - 2. On the TMS Main Menu, select Cell Controller.
 - 3. On the CELL STATUS screen, select the Cell Offline button.
 - 4. Select the Conveyor button.
 - On the CONVEYOR MANAGEMENT screen, select the Device Id(s) (and select the zone(s) if applicable) for the conveyor being checked.
 - 6. Select Force Output button. The conveyor (zone(s)) selected should now be operating.
 - 7. Check for noise. If roller is excessively noisy, notify supervisor.
 - 8. Check fastening nuts for movement. If the fastening nuts rotate when the rollers start and stop, power down affected conveyor segment and lockout electrical power as prescribed by the current local lockout/restore procedures and retighten the nuts to 35 to 37 foot-pounds. After retightening the nuts, restore the equipment to service as prescribed by the current local

U.S. Postal Service	IDENTIFICATION															
	WC	RK	EQUIPMENT								CLA	ASS	N	UMBE	TYPE	
Maintenance Checklist	CODE ACRONY						MYM				CO	DE				
	0	3	Т	Т							В	Α	2	0	1	М
Equipment Nomenclature	Equ	Equipment Model					В	Bulletin Filename					Occurrence			
LM TMS TT		Bi-Directional Conveyor					M	M090	030AD			y				

Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	s
Component	No	(Comply with all current safety precautions)	Time	Skill			
			Req	Lev	Run	Pieces	Freq.
			(min)		Hours	Fed	
						(000)	

lockout/restore procedures.

- Check for sluggish movement of trays. If sluggish movement is present in the normal direction, check for broken or slipping O-rings and check for malfunctioning O-rings. If any of these conditions exist, notify supervisor.
- 10. After completing all checks, select OK to stop selected conveyor rollers.
- 11. On the CONVEYOR MANAGEMENT screen, select Cell Status button.
- 12. On the CELL STATUS screen, select Cell Online button.
- 13. Select Exit button.
- 14. On the TMS Main Menu, select Log Off button.

CLEAN UP

 Clean up. Ensure all tools, lubricants, rags, etc., 1 All are removed from the work area. Notify supervisor of any deficiencies.

ATTACHMENT 3

LM TMS TT BI-DIRECTIONAL CONVEYOR MASTER CHECKLIST

03-TT-BA-202-M

SEMI-ANNUAL

Time Totals:

9 Minutes per floor level module 9 Minutes per 1-4 zone elevated module 10 Minutes per 5-8 zone elevated module

ΑII

9

9

1

	maintenance recimies appoint conten															
U.S. Postal Service								IDI	ENTIF	ICATI	ON					
	WC	DRK	EQUIPMENT						CLASS				N	UMBI	TYPE	
Maintenance Checklist	CC	DE				ACRO	MYNC		CODE			DE				
	0	3	Т	Т							В	Α	2	0	2	М
Equipment Nomenclature	Equ	ipmer	nt Mo	del				Е	Bulletir	(Occurrence					
LM TMS TT		Bi-Directional Conveyor					MI)	Semi-Annual							
											•	•				

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
2011		(,,	Req (min)	Lev	Run Hours	Pieces Fed	Freq.
			,			(000)	

SAFETY STATEMENT

COMPLY WITH ALL SAFETY PRECAUTIONS.
 Disconnect power and apply lockouts when
 required by this instruction. Refer to current
 local lockout procedures to properly shut
 down and lock out this machine. Open
 equipment and inspect dust conditions.
 Check for suspicious dust or unusual debris.
 If any unusual substance is found notify
 supervisor prior to proceeding with any
 further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp cloth, lint-free cloth or brush, must be used in place of compressed or blown air. Report safety deficiencies to your supervisor immediately upon detection.

POWER DOWN

2. **Power down and lockout power.** Power down the machine and lockout its power as prescribed by the current local lockout/restore procedures.

PHOTOEYES

- Clean photoeyes and reflectors. Using a * clean, dry cloth, clean dust and dirt from the photo eyes and reflectors. **
 - * 1 Min/floor level module
 - ** 1 Min/1-4 zone elevated module
 - *** 2 Min/5-8 zone elevated module

RETURN TO SERVICE

4. **Restore equipment to service**. Restore equipment to service as prescribed by the current local lockout/restore procedures.

CLEAN UP

 Clean up. Ensure all tools, lubricants, rags, etc., 1 All are removed from the work area. Notify supervisor of any deficiencies.