# MAINTENANCE TECHNICAL SUPPORT CENTER / MAINTENANCE POLICIES & PROGRAMS ENGINEERING / UNITED STATES POSTAL SERVICE

# Maintenance Management Order UNITED STATES POSTAL SERVICETM



SUBJECT: Preventive Maintenance (PM) Servicing Guidelines for

Lockheed Martin (LM) Tray Management System (TMS)

Tray Transport Diverter (TT) Conveyor Right Angle

Transfer (RAT) Modules

TO: LM TMS Sites

**DATE:** September 25, 2010

**NO**: MMO-078-10

FILE CODE: TM05

rorn:mm09070ad

This Maintenance Management Order (MMO) provides PM Servicing Guidelines for LM TMS Tray Transport Diverter (TT) Conveyor Right Angle Transfer (RAT) Modules.

The workhours represented in this MMO reflect the maximum workhours required to maintain the equipment. Given local conditions, management may modify task frequencies.

The minimum maintenance skill level required to perform each task is included in the Minimum Skill Level column of each checklist. This does not preclude higher level employees from performing any of this work.

Maintenance Managers are to use these preventive maintenance guidelines when preparing the route sheets for local maintenance personnel. It is the responsibility of each Maintenance Manager to ensure all WARNINGS, CAUTIONS, and NOTES are included with each applicable task as part of the preparation of any local route sheets.

## WARNING

Various products requiring Material Safety Data Sheets (MSDS) may be utilized during the performance of the procedures in this bulletin. Ensure the current MSDS for each product used is on file and available to all employees. When reordering such a product, it is suggested that current MSDS be requested. Refer to MSDS for appropriate personal protective equipment.

Web Access: https://www1.mtsc.usps.gov

# WARNING

The use of compressed or blown air is prohibited. An alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp rag, lint-free cloth, or brush must be used in place of compressed or blown air.

For questions or comments concerning this bulletin contact the MTSC HelpDesk, either online at MTSC>HELPDESK>Create/Update Tickets or call (800) 366-4123.

Robert E. Albert

Manager

Maintenance Technical Support Center Maintenance Policies and Programs

- 1. Summary of Workload Estimate
- 2. LM TMS TT Conveyor Right Angle Transfer (RAT) Modules: Master Checklist: 03-TT-IA-601-M: Monthly
- 3. LM TMS TT Conveyor Right Angle Transfer (RAT) Modules: Master Checklist: 03-TT-IA-602-M: Semi-Annual

# **ATTACHMENT 1**

### SUMMARY

### **WORKLOAD ESTIMATE**

**FOR** 

LM TMS TT CONVEYOR RIGHT ANGLE TRANSFER (RAT) MODULES

# SUMMARY WORKLOAD ESTIMATE

### Floor and Zone 1-4 Elevated Level Modules

Days	Routine Servicing (hrs/yr)	Repair* (hrs/yr)	Total Servicing & Repair Time (hrs/yr)	Nonproductive Time ** (hrs/yr)	Total Servicing Per Machine (hrs/yr)
5 Day	2.66	0.80	3.46	0.34	3.81
6 Day	2.66	0.80	3.46	0.34	3.81
7 Day	2.66	0.80	3.46	0.34	3.81

### 5-8 Zone Elevated Modules

Days	Routine	Repair*	Total	Nonproductive	Total
	Servicing	(hrs/yr)	Servicing &	Time **	Servicing
	(hrs/yr)		Repair	(hrs/yr)	Per
			Time		Machine
			(hrs/yr)		(hrs/yr)
5 Day	2.70	0.81	3.51	0.35	3.86
6 Day	2.70	0.81	3.51	0.35	3.86
7 Day	2.70	0.81	3.51	0.35	3.86

### **NOTES**

\*Repair estimates based on 30% of servicing.

<sup>\*\*</sup>Based on 10% of total servicing and repair.

# **ATTACHMENT 2**

# LM TMS TT CONVEYOR RIGHT ANGLE TRANSFER (RAT) MODULES MASTER CHECKLIST

03-TT-IA-601-M

MONTHLY

Time Total: 11 Minutes per module

ΑII

9

9

1

2

U.S. Postal Service								IDE	NTIF	CAT	ION						
<b> </b>	WC	RK			Е	QUIF	MEN	•			CLA	ASS		Νl	JMBE	R	TYPE
Maintenance Checklist	CC	DE				ACRO	MYNC				CO	DE					
	0	3	Т	Т							I	Α	-	6	0	1	М
Equipment Nomenclature	Equ	ipmeı	nt Mo	del				В	ulletin	Filer	name		Occ	urre	ence		
LM TMS TT		Cor	nvey	or R	ight	Ang	е		M	M090	070AD	)			Мо	nthl	V
		Transfer															,

Ī	Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
	·		, ,	Req (min)	Lev	Run Hours	Pieces Fed (000)	Freq.

### SAFETY STATEMENT

1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

# THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp cloth, lint-free cloth, or brush, must be used in place of compressed or blown air. Report safety deficiencies to your supervisor immediately upon detection.

#### POWER DOWN

2. Power down and lock out power and compressed air as prescribed by the current local lockout/restore procedures.

#### CROSS BELTS

#### 3. Clean cross belts.

- 1. Check cross belts for attached debris. Remove any debris found. If required, clean with soap and water.
- 2. Check the cross belt tension for slippage of the cross belts. If slippage of the cross belts is observed, perform following:
  - a. Place the hook of a tension meter under each belt and lift it up about 2 inches above its normal position. The tension meter should read between 3 and 4 pounds.
  - b. If the tension is below the range specified, the cross belt must be tightened. If the tension is above the range specified, the cross belt must be loosened. Small adjustments can be made with the anchor spring.

U.S. Postal Service								IDE	NTIF	CAT	ION					
Maintonanao Chaaldiat		PK					MENT	•			CLA		N	JMBE	ER	TYPE
Maintenance Checklist	CC	DE				ACRO	MYNC				CO	DE				
	0	3	Т	Т								Α	6	0	1	M
Equipment Nomenclature	Equ	ipmer	nt Mo	del				Ві	ulletin	Filer	name	(	Occurr	ence		
LM TMS TT		Cor	nvey	or R	ight	Angl	е		M	M090	070AD			Мо	nthl	y
			7	rans	sfer											

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Freq.

**O-RINGS** 

- 4. Check all O-rings for deficiencies.
- \* 1
- 9

- 1. Remove debris.
- 2. Check for slippage when running heavy tray (50 lbs) on rollers.
- \* Time per zone.

# WARNING

Be cautious when working around or on equipment when power has been applied.

RETURN TO SERVICE

- Restore equipment to service. 5. Restore equipment to service as prescribed by the current local lockout/restore procedures.
- CLEAN UP
- Clean up. Ensure all tools, lubricants, rags, etc., 6. are removed from the work area. supervisor of any deficiencies.

ΑII

9

U.S. Postal Service								IDEN	IFICA	TION					
Maintenance Checklist	_	ORK ODE					MENT NYM	-			ASS DDE	N	UMBE	ĒR	TYPE
	0	3	Т	Т						I	Α	6	0	1	М
Equipment Nomenclature LM TMS TT	Equ	ipmer Cor	nvey		_	Ang	е			ename 9070AD		Occurr		nthl	у

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
			Req (min)	Lev	Run Hours	Pieces Fed (000)	Freq.

# THIS PAGE BLANK

# **ATTACHMENT 3**

# LM TMS TT CONVEYOR RIGHT ANGLE TRANSFER (RAT) MODULES MASTER CHECKLIST

03-TT-IA-602-M

**SEMI-ANNUAL** 

Time Total:

14 Minutes per floor level module 14 Minutes per 1-4 zone elevated module 15 Minutes per 5-8 zone elevated module

2

ΑII

U.S. Postal Service								IDE	NTIF	CAT	ION						
<b> </b>	WC	RK			Е	QUIF	MEN	•			CLA	ASS		ΝL	JMBE	R	TYPE
Maintenance Checklist	CC	DE				ACRO	MYM				CO	DE					
	0	3	Т	Т							I	Α	(	6	0	2	М
Equipment Nomenclature	Equ	ipmeı	nt Mo	del				В	ulletin	Filer	name		Осс	urre	ence		
LM TMS TT		Cor	nvey	or R	ight	Ang	е		M	M090	070AD	)		S	emi-	-Ann	ıual
			Transfer														

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Freq.

### SAFETY STATEMENT

1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

# THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp cloth, lint-free cloth, or brush, must be used in place of compressed or blown air. Report safety deficiencies to your supervisor immediately upon detection.

#### POWER DOWN

- Power down and lock out power and compressed air as prescribed by the current local lockout/restore procedures.
- PHOTO EYES
- 3. Clean photo eyes and reflectors. Using a clean, dry cloth, clean dust, and dirt from the photo eyes and reflectors.

3

\* 1

\*\* 1

3

9

9

9

- \* Minute per floor level module
- \*\* Minute for 1-4 zone elevated module

### WARNING

Eye protection (goggles or face shield) must be worn when releasing fluids from the filter regulator separator (FRS) bowl.

### AIR REGULATOR

- 4. Clean and adjust air regulator that controls air service to the Right Angle Transfer (RAT) module being serviced.
  - 1. Turn off and lock out the feed/source side of the regulator.

RETURN TO

5

a

Pactora

U.S. Postal Service								IDENT	IFICAT	ION					
	WC	RK			Е	QUIF	MENT	•		CLA	ASS	N	UMBE	ΞR	TYPE
Maintenance Checklist	CC	DE				ACRO	MYM			CO	DE				
	0	3	Т	Т						I	Α	6	0	2	M
Equipment Nomenclature	Equ	ipmeı	nt Mo	del				Bulle	tin File	name	(	Occurr	ence		
LM TMS TT		Cor	nvey	or R	ight	Ang	е	ľ	<b>MM09</b>	070AD	)	S	Semi	-Anr	nual
	Transfer														

Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	s
Component	No	(Comply with all current safety precautions)	Time	Skill			
			Req	Lev	Run	Pieces	Freq.
			(min)		Hours	Fed	•
						(000)	

- Remove the bowl and air deflector from the regulator.
- 3. Clean air deflector and inside of regulator bowl with a clean cloth or paper wipe.
- 4. Replace air deflector and bowl.
- 5. Remove lockout device from compressed air source to the regulator and restore air pressure to the regulator.
- 6. Adjust air regulator to 85 to 90 PSI.
- 7. Listen for air escaping from the pneumatic system. A leak is present if abnormally loud hissing sound is emitted while the module is powered, but not operating. If a leak is observed, notify supervisor.

## WARNING

Be cautious when working around or on equipment when power has been applied.

SERVICE	J.	equipment to service. Restore equipment to service as prescribed by the current local lockout/restore procedures.	7	3
CLEAN UP	6.	<b>Clean up.</b> Ensure all tools, lubricants, rags, etc., are removed from the work area. Notify supervisor of any deficiencies.	1	All

Postoro aquinment to service