MAINTENANCE TECHNICAL SUPPORT CENTER / MAINTENANCE POLICIES & PROGRAMS ENGINEERING / LINITED STATES POSTAL SERVICE



SUBJECT: Preventive Maintenance (PM) Guidelines for

the Tray Depalletizer Singulator (TDS)

NO: MMO-100-09

DATE:

TO: All TDS Sites FILE CODE: TM6

rrep:mm08049ac

MAINTENANCE MANAGEMENT ORDER

August 5, 2009

This Maintenance Management Order (MMO) provides Preventive Maintenance Guidelines for the Tray Depalletizer Singulator system (TDS).

The work hours indicated in the workload estimate (Attachment 1) are based on a 20-hour operations window and reflect the *maximum* annual work hours required to maintain each system. Management may modify task frequencies to address local conditions.

The minimum maintenance skill level required to perform each task is included in the minimum skill level column of each checklist. This does not preclude higher level employees from performing any of this work.

Maintenance Managers are to use these preventive maintenance guidelines when preparing the route sheets for local maintenance personnel. It is the responsibility of each Maintenance Manager to ensure all WARNINGS, CAUTIONS, and NOTES are included with each applicable task as part of the preparation of any local route sheets.

WARNING

Various products requiring Material Safety Data Sheets (MSDS) may be utilized during the performance of the procedures in this bulletin. Ensure the current MSDS for each product used is on file and available to all employees. When reordering such a product, it is suggested that current MSDS be requested. Refer to MSDS for appropriate personal protective equipment.

Web Access: https://www1.mtsc.usps.gov

WARNING

The use of compressed or blown air is prohibited. An alternative cleaning method such as a HEPA filtered vacuum cleaner, a damp rag, lint-free cloth, or brush must be used in place of compressed or blown air.

For questions or comments concerning this bulletin contact the MTSC HelpDesk, either online at MTSC>HELPDESK>Create/Update Tickets or call (800) 366-4123.

Robert E. Albert

Manager

MAINTENANCE MANAGEMENT ORDER

Maintenance Technical Support Center Maintenance Policies and Programs

Attachments: 1. Summary Workload Estimate

2. Master Checklist: 03-TDS-AA-001-M: Daily

3. Master Checklist: 03-TDS-AA-002-M: Weekly

4. Master Checklist: 03-TDS-AA-003-M: Monthly

5. Master Checklist: 03-TDS-AA-004-M: Quarterly

6. Master Checklist: 03-TDS-AA-005-M: Semi-Annual

7. Master Checklist: 03-TDS-AA-006-M: Annual

ATTACHMENT 1

SUMMARY

WORKLOAD ESTIMATE

FOR

TDS

Attachment 1 1-1

SUMMARY WORKLOAD ESTIMATE FOR TDS

Operation	Routine Servicing (hrs/yr)	Repair* (hrs/yr)	Routine Servicing + Repair Time (hrs/yr)	Non-productive Time** (hrs/yr)	Total Servicing Per Machine (hrs/yr)
5	356.57	106.97	463.54	46.35	509.89
6	401.63	120.49	522.12	52.21	574.33
7	446.70	134.01	580.71	58.07	638.78

NOTES:

MAINTENANCE MANAGEMENT ORDER

- *Repair estimates based on 30% of servicing.
- **Based on 10% of total servicing and repair.

PM CHECKLIST TIME SUMMARY

Checklist	Checklist Time (per year)
03-TDS-AA-001-M: Daily	13520 minutes for 5 days/week
	16224 minutes for 6 days/week
	18928 minutes for 7 days/week
03-TDS-AA-002-M: Weekly	5356 minutes
03-TDS-AA-003-M: Monthly	1644 minutes
03-TDS-AA-004-M: Quarterly	588 minutes
03-TDS-AA-005-M: Semi-Annual	114 minutes
03-TDS-AA-006-M: Annual	172 minutes

ATTACHMENT 2

MASTER CHECKLIST

03-TDS-AA-001-M

DAILY

Time Total: 52 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 2 2-1

ΑII

U.S. Postal Service							IDI	ENTIF	ICAT	ION					
Maintenance Checklist	CO	RK DE				 MEN.					ASS DE	N	UMBI	ER	TYPE
	0	3	Т	D	S					Α	Α	0 0 1			М
Equipment Nomenclature Tray Depalletizer Singulator	Equ	ipmer	nt Mo	del			E	Bulletir M I		name 049AC		reque	,_	aily	

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	ls
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT 1. COMPLY WITH ALL SAFETY PRECAUTIONS.

Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

SYSTEM

MAINTENANCE MANAGEMENT ORDER

- 2. **Power down and lock out power.** Power down the machine and lock out its electrical power as prescribed by the current local lockout instructions providing lockout/restore procedures.

ΑII

ΑII

MAIL SEARCH

3. **Perform a mail search.** Search for mail pieces in 10 7 and under the machine.

VACUUM HEAD

- 4. **Check vacuum cups.** Check for worn or ripped 15 7 vacuum cups.
- Check vacuum stems. Check vacuum stems for 15 7 free movement.

CLEAN UP

. Clean up. Ensure all tools, lubricants, rags, etc., 2 are removed from the work area. Report all deficiencies to your supervisor.

WARNING

Be cautious when working around or on equipment when power has been applied.

۵	Ì	
Ĺ	Ì	
Z		١
7	Y	
		١
١		
ŀ		
-	,	
<u> </u>	Ī	
	į	
•	•	
Ļ	ļ	
(_	
4	1	ζ
2	/	
•	1	ľ
3	1	
-		
L	l	
ī	'	3
-	,	
2		
-		
í	-	
L		
֡֜֜֟֩֜֩	,	,
4	_	
	1	ľ

manitoriarios recinical eapport	90															, ,,
U.S. Postal Service								IDE	NTIF	ICAT	ION					
Maintenance Checklist		ORK ODE					MEN ⁻					ASS DE	N	JMBI	TYPE	
	0 3 T D S									Α	Α	0	0	1	М	
Equipment Nomenclature Tray Depalletizer Singulator	Equ	quipment Model Bulletin Filename MM08049AC										Freque				

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	s
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SYSTEM

7. Restore equipment to service. Restore 3 All equipment to service as prescribed by the current local procedure providing lockout/restore procedures.

Attachment 2 2-3

U.S. Postal Service								IDI	ENTIF	ICATI	ON					
Maintenance Checklist		WORK EQUIPMENT CLASS CODE ACRONYM CODE								Ν	UMB	TYPE				
		0 3 T D S A A 0 0									0	1	М			
Equipment Nomenclature Tray Depalletizer Singulator		ipmeı	nt Mo	del				E	Bulletin Filename MM08049AC			;	Freque			

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	s
Component	NO	(Comply with all current salety precautions)	Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

THIS PAGE BLANK

ATTACHMENT 3

MASTER CHECKLIST

03-TDS-AA-002-M

WEEKLY

Time Total: 103 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 3 3-1

3

ΑII

U.S. Postal Service								ΙD	ENTIF	ICAT	ION					
	WOI	RK			Е	QUI	PMEN	ΙT			CL	ASS	Ν	UMBI	ER	TYPE
Maintenance Checklist	CODE ACRONYM CODE															
	0	3	Т	D	S						Α	Α	0	0	2	M
Equipment Nomenclature	Equip	pmer	nt Mo	del					Bulletir	า Filer	name		Freque	ency		
Tray Depalletizer Singulator									MI	M080	049AC	;		W	eekly	/

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	s
			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT 1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

WARNING

Be cautious when working around or on equipment when power has been applied.

MAIN CONTROL ENCLOSURE (EC-1)

- 2. **Check air conditioner.** Clean air conditioner air filter and check that the fans are operating.
- 5 9

PALLET LIFT

MAINTENANCE MANAGEMENT ORDER

- Check the pallet lift. Check that the pallet lift moves freely.
- 5 9
- 4. **Check transfer area guard switch.** Check that the transfer area guard switch operates.

SYSTEM

5. **Power down and lock out power.** Power down the machine and lock out its electrical power source as prescribed by the current local lockout/restore procedures.

4 All

9

THE REPORT OF THE PROPERTY OF																
U.S. Postal Service								IDE	NTIF	ICATI	ION					
		RK			_		MEN	-			CLA	ASS	N	UMBI	ΞR	TYPE
Maintenance Checklist	CO	DE				ACRO	DNYM				CO	DE				
	0	3	Т	D	S						Α	Α	0	0	2	М
Equipment Nomenclature	Equ	ipmer	nt Mo	del				В	ulletir	Filer	name		Freque	ency		
Tray Depalletizer Singulator			MM08049AC									/				

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
			Req (min)	Lev	Run Hours	Pieces Fed	Weeks
			()		riodio	(000)	

WARNING

		Wear proper hand protection to avoid cuts, scrapes, and other hand injuries when handling and checking cables.		
PALLET LIFT	6.	Check lift cable. Check entire length of pallet lift cable for wear, fraying, cracks, flat spots, broken wires, nicks, cuts, or obstructions. Check cable winding on pallet lift cable winding drum.	12	9
	7.	Check lift cable connections. Check that all pallet lift cable connections at the pallet lift are tight and that the ferrules on the winding drum are securely held to the drum.	8	9
	8.	Check winding drum. Check the pallet lift cable winding drum for excessive wear, and that all connections to the shaft and the cable anchors are tight and secure.	10	9
	9.	Check winding drum sensing idler. Check that the pallet lift cable tension sensing idlers are on the pallet lift cable.	2	9
PALLET STACKER	10.	Check drive chain tension. Check the tension of the pallet stacker drive chain. Refer to the mechanical setup section of the FOTH maintenance manual.	25	9
PUSHER	11.	Check pusher chain tension. Check the tension of the pusher chain. Refer to the mechanical setup section of the FOTH maintenance manual.	5	9
TRANSFER SHEET	12.	Check timing belt. Check the transfer sheet timing belt for cracks or uneven wear.	5	9
	13.	Check timing belt tension. Check the tension of the transfer sheet timing belt. Refer to the mechanical setup section of the FOTH maintenance manual.	5	9
PNEUMATICS	14.	Check lubricator. Check the lubricator oil level. Add oil as needed.	2	9
	15.	Check line filter. Check the line filter water level and drain.	2	9
	PUSHER FRANSFER SHEET	9. PALLET STACKER 10. PUSHER 11. TRANSFER 12. SHEET 13.	winding drum for excessive wear, and that all connections to the shaft and the cable anchors are tight and secure. 9. Check winding drum sensing idler. Check that the pallet lift cable tension sensing idlers are on the pallet lift cable. PALLET STACKER 10. Check drive chain tension. Check the tension of the pallet stacker drive chain. Refer to the mechanical setup section of the FOTH maintenance manual. Check pusher chain tension. Check the tension of the pusher chain. Refer to the mechanical setup section of the FOTH maintenance manual. CRANSFER 12. Check timing belt. Check the transfer sheet timing belt for cracks or uneven wear. 13. Check timing belt tension. Check the tension of the transfer sheet timing belt. Refer to the mechanical setup section of the FOTH maintenance manual. PNEUMATICS 14. Check lubricator. Check the lubricator oil level. Add oil as needed. 15. Check line filter. Check the line filter water level	winding drum for excessive wear, and that all connections to the shaft and the cable anchors are tight and secure. 9. Check winding drum sensing idler. Check that the pallet lift cable tension sensing idlers are on the pallet lift cable. PALLET STACKER 10. Check drive chain tension. Check the tension of the pallet stacker drive chain. Refer to the mechanical setup section of the FOTH maintenance manual. PUSHER 11. Check pusher chain tension. Check the tension of the pusher chain. Refer to the mechanical setup section of the FOTH maintenance manual. PRANSFER 12. Check timing belt. Check the transfer sheet timing belt for cracks or uneven wear. 13. Check timing belt tension. Check the tension of the transfer sheet timing belt. Refer to the mechanical setup section of the FOTH maintenance manual. PNEUMATICS 14. Check lubricator. Check the lubricator oil level. Add oil as needed. 15. Check line filter. Check the line filter water level 2

Attachment 3 3-3

ΑII

U.S. Postal Service								ID	ENTIF	ICATI	ION					
	WC	DRK			Е	QUII	PMEN	Т			CLA	ASS	N	UMB	ER	TYPE
Maintenance Checklist	CC	DE				ACR	NYNC	1			CC	DE				
	0	3	Т	D	S						Α	Α	0	0	2	М
Equipment Nomenclature	Equ	ipmeı	nt Mo	del					Bulletir	n Filer	name		Frequ	ency		
Tray Depalletizer Singulator									MI	M080	049AC	;		W	eekly	/

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
osmponom:		(60.1.6.)	Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

CLEAN UP

 Clean Up. Ensure all tools, lubricants, rags, etc., are removed from the work area. Report all deficiencies to your supervisor.

WARNING

Be cautious when working around or on equipment when power has been applied.

SYSTEM

MAINTENANCE MANAGEMENT ORDER

17. **Restore equipment to service.** Restore 3 All equipment to service as prescribed by the current local procedure providing lockout/restore procedures.

ATTACHMENT 4

MASTER CHECKLIST

03-TDS-AA-003-M

MONTHLY

Time Total: 137 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 4 4-1

3

ΑII

ΑII

7

7

7

60

10

U.S. Postal Service								IDE	NTIF	ICATI	ON					
	WC	RK			Е	QUIF	MEN	Γ			CLA	ASS	N	UMB	ΞR	TYPE
Maintenance Checklist	CO	DE				ACRO	MYM				CO	DE				
	0	3	Т	D	S						Α	Α	0	0	3	М
Equipment Nomenclature	Equ	ipmer	nt Mo	del				В	ulletir	Filer	name		Freque	ency		
Tray Depalletizer Singulator									MI	M080)49AC	;		Mc	nthl	y

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT COMPLY WITH ALL SAFETY PRECAUTIONS.
 Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

SYSTEM

PALLET LIFT

MAINTENANCE MANAGEMENT ORDER

 Power down and lock out power. Power down the machine and lock out its electrical power source as prescribed by the current local lockout/restore procedures.

WARNING

Discard solvent soaked materials according to local procedures to prevent spontaneous combustion.

- 3. Clean the machine. Use a HEPA vacuum and damp rags to clean the entire machine, including CS-1, EC-1, and CC-1.
- Grease idler pulley. Wipe grease fitting. Grease pallet lift idler pulley. Use 1 to 3 pumps of Chevron Auto LC EP #2 grease, Mobility AW-2 or equivalent.
- Grease pillow block bearings. Wipe grease fitting. Grease pallet lift pillow block bearings. Use 1 to 3 pumps of Chevron Auto LC EP #2 grease, Mobility AW-2 or equivalent.

4-2

7

VACUUM

BLOWER

CLEAN UP

U.S. Postal Service								IDI	ENTIF	ICAT	ION					
	WC	DRK			Е	QUI	PMEN	T			CL/	ASS	N	UMBI	ER	TYPE
Maintenance Checklist	CC	DE				ACR	MYNC	<u> </u>			CC	DE				
	0	3	Т	D	S						Α	Α	0	0	3	M
Equipment Nomenclature	Equ	ipmeı	nt Mo	del				Е	Bulletir	n Filer	name		Freque	ency		
Tray Depalletizer Singulator									MI	M08	049AC	;		Mo	onthl	y

Part or	Item	Task Statement and Instruction	Est.	Min.		Threshold	S
Component	No	(Comply with all current safety precautions)	Time	Skill			
			Req	Lev	Run	Pieces	Weeks
			(min)		Hours	Fed	
						(000)	

WARNING

Discard solvent soaked materials according to local procedures to prevent spontaneous combustion.

- 6. **Grease 4-bolt flange bearings.** Wipe grease 10 7 fitting. Grease the pallet lift 4-bolt flange bearings. Use 1 to 3 pumps of Chevron Auto LC EP #2 grease, Mobility AW-2 or equivalent.
- TRANSFER 7. **Grease 4-bolt flange bearings.** Wipe grease 5 7 SHEET fitting. Grease the transfer sheet 4-bolt flange bearings. Use 1 to 3 pumps of Chevron Auto LC EP #2 grease, Mobility AW-2 or equivalent.
 - 8. **Check guide blocks.** Check the transfer sheet 5 9 guide blocks for wear.

SINGULATION 9. **Grease pillow block bearings.** Wipe grease 15 fitting. Grease the singulation assembly pillow block bearings. Use 1 to 3 pumps of Chevron Auto LC EP #2 grease, Mobility AW-2, or

Auto LC EP #2 grease, Mobility AW equivalent.

Check inlet silencer. Check vacuum blower 5 9 inlet internal silencer for blockage.

11. **Check Wye fitting cap.** Check the vacuum 5 9 blower Wye fitting cap and clean out any metal or debris.

Clean up. Ensure all tools, lubricants, rags, etc., 2 All are removed from the work area. Report all deficiencies to your supervisor.

WARNING

Be cautious when working around or on equipment when power has been applied.

SYSTEM 13. Restore equipment to service. Restore 3 All equipment to service as prescribed by the current local procedure providing lockout/restore procedures.

Attachment 4

MAINTENANCE MANAGEMENT ORDER

100 00							 vian	1011	arro.	0 1001	111100	. –	, 20.		11101
U.S. Postal Service							IDE	NTIF	ICAT	ION					
Maintenance Checklist	CO	RK DE				QUIF ACRO					ASS DE	N	UMBI	ΞR	TYPE
	0	3	Т	D	S					Α	Α	0	0	3	М
Equipment Nomenclature Tray Depalletizer Singulator	Equi	ipmer	nt Mo	del			В			name 049AC		Freque	,	nthly	y

ľ	Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
	·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

THIS PAGE BLANK

ATTACHMENT 5

MASTER CHECKLIST

03-TDS-AA-004-M

QUARTERLY

Time Total: 147 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 5 5-1

ΑII

U.S. Postal Service								ID	ENTIF	ICAT	ION					
	WO	RK			Е	QUII	PMEN	1T			CL	ASS	N	IUMBI	ER	TYPE
Maintenance Checklist	COI	DE				ACR	ONYN	Л			CC	DE				
	0	3	Т	D	S						Α	Α	0	0	4	M
Equipment Nomenclature	Equi	pmer	nt Mo	del					Bulletir	า Filer	name		Frequ	ency		
Tray Depalletizer Singulator									MI	M080	049AC	;		Qu	arter	ly

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT 1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

WARNING

Be cautious when working around or on equipment when power has been applied.

SYSTEM

MAINTENANCE MANAGEMENT ORDER

- 2. **Conduct ultrasound scan.** Use an ultrasonic test instrument to check for air and vacuum leaks.
- 3. **Power down and lock out power.** Power down the machine and lock out its electrical power source as prescribed by the current local lockout/restore procedures.

WARNING

Wear proper hand protection to avoid cuts, scrapes, and other hand injuries when handling and checking cables.

PALLET STACKER

4.

Check drive chain. Check the pallet stacker drive chain for wear. Refer to the mechanical setup section of the FOTH maintenance manual.

55 9

5

9

ΑII

Maintenance recimical capport	, , , ,															0 00
U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maintenance Checklist	_	RK DE			_		MEN ONYN					ASS DE	N	UMBI	ΞR	TYPE
	0	3	Т	D	S						Α	Α	0	0	4	М
Equipment Nomenclature Tray Depalletizer Singulator	Equipment Model						E	Bulletir MI		name 049AC		Freque	,	arter	ly	

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
Component	110	(comply man an our one out of procedure)	Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

 Check lifting fork bearing slides. Check the pallet stacker lifting fork bearing slides for wear. Refer to the mechanical setup section of the FOTH maintenance manual. 10 9

9

9

9

ΑII

WARNING

Wear proper hand protection to avoid cuts, scrapes, and other hand injuries when handling and checking cables.

PUSHER

- 6. **Check chain.** Check the pusher chain for wear. 55 Refer to the mechanical setup section of the FOTH maintenance manual.
- 7. Check chain guide block. Check the pusher 5 chain guide block for wear, pusher angle deflection or binding. Check that the chain pins are straight and perpendicular to the chain. Refer to the mechanical setup section of the
- 8. Check idler sprocket. Check the pusher idler sprocket for alignment, lateral movement, worn bearings, or excessive noise. Refer to the mechanical setup section of the FOTH maintenance manual.

FOTH maintenance manual.

CLEAN UP

Clean up. Ensure all tools, lubricants, rags, etc., are removed from the work area. Report all deficiencies to your supervisor.

WARNING

Be cautious when working around or on equipment when power has been applied.

SYSTEM

Restore equipment to service. Restore 3 All equipment to service as prescribed by the current local procedure providing lockout/restore procedures.

Attachment 5 5-3

U.S. Postal Service								IDE	NTIF	ICATI	ON					
	WC	PK			Е	QUIF	MEN	Γ			CLA	ASS	Ν	UMBI	ΞR	TYPE
Maintenance Checklist	CO	DE				ACRO	MYNC				CC	DE				
	0	3	Т	D	S						Α	Α	0	0	4	М
Equipment Nomenclature	Equ	Equipment Model						В	ulletir	Filer	name	F	reque	ency		
Tray Depalletizer Singulator									MI	M080)49AC	;		Qua	arter	ly

I	Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	ls
	·		, ,	Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

THIS PAGE BLANK

ATTACHMENT 6

MASTER CHECKLIST

03-TDS-AA-005-M

SEMI-ANNUAL

Time Total: 57 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 6 6-1

3

ΑII

ΑII

9

9

U.S. Postal Service								IDE	NTIF	ICAT	ION					
Maintenance Checklist	WOI						MENT NYM	•			_	ASS DE	Ν	UMBI	ER	TYPE
maintenance checking	0	3	Т	D	S	AOIX	JIN I IVI				A	A	0	0	5	М
Equipment Nomenclature Tray Depalletizer Singulator	Equip	Equipment Model					В	ulletir M l		name 049AC		Freque	,	-Ann	ıual	

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
Ý			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT 1. COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

SYSTEM

MAINTENANCE MANAGEMENT ORDER

 Power down and lock out power. Power down the machine and lock out its electrical power source as prescribed by the current local lockout/restore procedures.

WARNING

Discard solvent soaked materials according to local procedures to prevent spontaneous combustion.

PALLET STACKER

- 3. **Lubricate drive chain.** Lubricate the pallet 15 stacker drive chain. Brush with a light coat of
- 4. **Check idler sprocket.** Check the pallet stacker 10 drive chain idler sprocket for tooth wear and alignment. Refer to the mechanical setup section of the FOTH maintenance manual.

30W oil.

PUSHER

5. **Lubricate drive chain.** Lubricate the pusher 15 9 drive chain. Brush with a light coat of 30W oil.

U.S. Postal Service								IDE	NTIF	ICATI	ON					
Maintanana Chaeklist	_	RK					MEN					ASS	N	UMBE	ΞR	TYPE
Maintenance Checklist	CO	CODE ACRONYM								CO	DE					
	0	3	Т	D	S						Α	Α	0	0	5	М
Equipment Nomenclature	Equ	Equipment Model					В	ulletir	Filer	name	F	reque	ency			
Tray Depalletizer Singulator								M	M080	049AC	;	S	Semi	-Ann	ual	

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	s
Component	110	(Comply with all current safety precautions)	Req (min)	Lev	Run Hours	Pieces Fed	Weeks
			, ,			(000)	

6. **Check idler sprocket.** Check the pusher drive chain idler sprocket for tooth wear and alignment. Refer to the mechanical setup section of the FOTH maintenance manual.

9

CLEAN UP

7. **Clean up.** Ensure all tools, lubricants, rags, etc., are removed from the work area. Report all deficiencies to your supervisor.

2 All

WARNING

Be cautious when working around or on equipment when power has been applied.

SYSTEM

8. **Restore equipment to service.** Restore equipment to service as prescribed by the current local procedure providing lockout/restore procedures.

3 All

MAINTENANCE MANAGEMENT ORDER

MAINTENANCE MANAGEMENT ORDER

										••••			- 0.	- -		
U.S. Postal Service								IDE	NTIF	ICAT	ION					
Maintenance Checklist	_	RK DE					MEN NYM					ASS DE	N	UMBI	ΞR	TYPE
	0	3	Т	D	S						Α	Α	0	0	5	М
Equipment Nomenclature Tray Depalletizer Singulator	Equipment Model							В	ulletir MI		name 049AC		reque	,	-Ann	ıual

ľ	Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	S
	·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

THIS PAGE BLANK

ATTACHMENT 7

MASTER CHECKLIST

03-TDS-AA-006-M

ANNUAL

Time Total: 172 Minutes

NOTE

The FOTH maintenance manual referred to in the checklist was provided to the site at the time of installation/training. Contact MTSC HelpDesk for assistance if FOTH maintenance manual is needed.

Attachment 7 7-1

3

ΑII

9

9

9

5

MAINTENANCE MANAGEMENT ORDER

U.S. Postal Service								ID	ENTIF	ICAT	ION					
Maintenance Checklist	t coi						MEN NYMC					ASS DE	Ν	UMBI	ER	TYPE
	0	3	Т	D	S						Α	Α	0	0	6	M
Equipment Nomenclature Tray Depalletizer Singulator	Equ	Equipment Model						I	Bulletir MI		name 049AC		reque	,	nnua	

Part or Component	Item No	Task Statement and Instruction (Comply with all current safety precautions)	Est. Time	Min. Skill		Threshold	s
			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SAFETY STATEMENT 1 COMPLY WITH ALL SAFETY PRECAUTIONS. Disconnect power and apply lockouts when required by this instruction. Refer to current local lockout procedures to properly shut down and lock out this machine. Open equipment and inspect dust conditions. Check for suspicious dust or unusual debris. If any unusual substance is found notify supervisor prior to proceeding with any further action on the equipment.

THE USE OF COMPRESSED OR BLOWN AIR IS PROHIBITED.

When cleaning is required, an alternative cleaning method such as a HEPA filtered vacuum cleaner or a damp rag must be used in place of compressed or blown air. A lint-free cloth or brush may be used on optical equipment only when other cleaning methods cannot be used. Report safety deficiencies to your supervisor immediately upon detection.

WARNING

Be cautious when working around or on equipment when power has been applied.

HMI CONTROL STATION (CS-1)

MAIN CONTROL

ENCLOSURE

(EC-1)

- Conduct thermal scan. Use a thermal imaging camera to conduct a thermal scan of the HMI Control Station (CS-1). Look for anomalies indicating a high resistance connection or other problem.
 - Conduct thermal scan. Use a thermal imaging camera to conduct a thermal scan of the Main Control Enclosure (EC-1). Look for anomalies indicating a high resistance connection or other problem.

PALLET STACKER CONTROL ENCLOSURE (CC-1) Conduct thermal scan. Use a thermal imaging camera to conduct a thermal scan of the Pallet Stacker Control Enclosure (CC-1). Look for anomalies indicating a high resistance connection or other problem.

U.S. Postal Service	IDENTIFICATION															
Maintenance Checklist		WORK EQUIPMEN									CLASS		N	UMBI	TYPE	
Maintenance Checkinst	CODE ACRONY						NYNC		CODE			DE V	0 0 6			N 4
	U	3	-	ט	0						Α	А	U	U	Ö	М
Equipment Nomenclature	Equipment Model				Е	Bulletin Filename				Frequency						
Tray Depalletizer Singulator					MM08049AC				Annual							

Part or	Item	Task Statement and Instruction	Est.	Min.	Thresholds		
Component	No	(Comply with all current safety precautions)	Time	Skill			
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks

SYSTEM

Power down and lock out power. Power down the machine and lock out its electrical power source as prescribed by the current local lockout/restore procedures.

All

7

7

9

9

ΑII

60

60

5

5

WARNING

Discard solvent soaked materials according to local procedures to prevent spontaneous combustion.

PALLET LIFT

MAINTENANCE MANAGEMENT ORDER

- 6 **Drain and refill main gear box.** Clean area around drain. Drain and refill the pallet lift main gear box. Use Chevron Hipersyn 460 synthetic oil, Mobil SHC634, or equivalent.
- 7 **Drain and refill in-line gear box.** Clean area around drain. Drain and refill the pallet lift in-line gear box. Use Chevron Ultragear 320, TPT Grade 6E Mineral Oil.

SINGULATION ASSEMBLY

- **Check urethane belts.** Check the singulation assembly urethane belts for wear and/or damage.
- 9 **Check air cylinders.** Check the singulation 15 9 assembly air cylinders for wear and/or damage.
- 10 **Check guide block tracking.** Check the tracking of the singulation assembly urethane guide blocks. Refer to the mechanical setup section of the FOTH maintenance manual.

CLEAN UP

1 Clean up. Ensure all tools, lubricants, rags, etc., 2 are removed from the work area. Report all deficiencies to your supervisor.

WARNING

Be cautious when working around or on equipment when power has been applied.

Attachment 7 7-3

ΑII

3

	•						manner of the state of the stat									
U.S. Postal Service		IDENTIFICATION														
Maintenance Checklist							QUIPMENT CRONYM				CLASS CODE		N	JMBE	TYPE	
	0	3	Т	D	S						Α	Α	0	0	6	М
Equipment Nomenclature Tray Depalletizer Singulator	Equipment Model					В	Bulletin Filename MM08049AC				Frequency Annual					

Part or	Item	Task Statement and Instruction	Est.	Min.	Thresholds			
Component	No	(Comply with all current safety precautions)	Time	Skill				
·			Req (min)	Lev	Run Hours	Pieces Fed (000)	Weeks	

SYSTEM

MAINTENANCE MANAGEMENT ORDER

12 **Restore equipment to service.** Restore equipment to service as prescribed by the current local procedure providing lockout/restore procedures.